



1. Press Spring loaded Pin



2. Release Pin



3. Re-position roller to desired position