

TERMINATION INSTRUCTIONS




Keystone Jacks 180 Degree Punchdown



- 781934** (Cat 5e White)
- 781935** (Cat 6 White)
- 792381** (Cat 6 Black)

1. Remove approximately 50mm of the cable sheath and separate the 4 pairs. For Cat 6 cables carefully cut back the central plastic separator flush with the cable sheath.
2. To assist termination it is recommended that the Keystone jack is mounted in section 'A' of the keystone termination puck (puck supplied free of charge with a box of 25 keystone jacks).

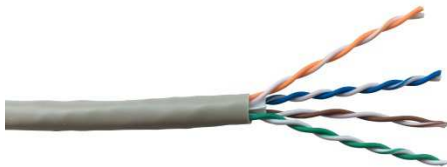


3. Present the cable at 90° to the rear of the jack and dress the wires in to the appropriate coloured IDC slots following the preferred wiring configuration.
4. Punch down the wires using a 110 style termination tool.



Keystone Jacks 180 Degree Punchdown

5. Remove the jack from the keystone puck. Rotate the cable through 90° so that it is perpendicular to the jack.
6. Fit the wire retention cap.

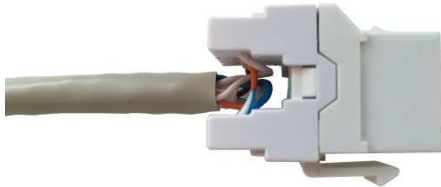

Recommended Tools

Part Number	Description	Purpose
786575	Side Cutters - 145mm	Cutting cable to length
993874	Cyclops Stripper	Cutting sheath
785404	Electronic Flush Cutters	Trimming cable tie
770218	Insenter Wire 110	Terminating and trimming wires