

TERMINATION INSTRUCTIONS




Keystone Jacks 180 Degree Toolless




- 789771** (Cat5e White)
- 789772** (Cat6 White)
- 793782** (Cat6 Black)

1. Remove approximately 50mm of the cable sheath and separate the 4 pairs. For Cat 6 cables carefully cut back the central plastic separator flush with the cable sheath.
2. Pass the wires through the hole in the rear of the wire retention cap.

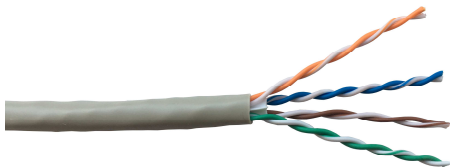

3. Dress the wires in to the appropriate coloured slots following the preferred wiring configuration.
4. Cut the wires flush with the outside edge of the wire retention cap.

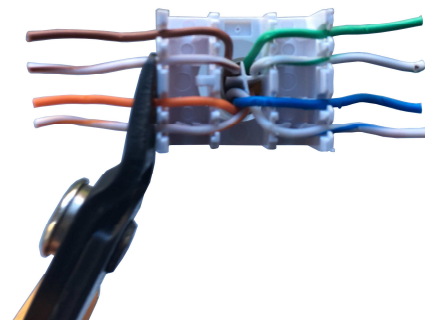

Keystone Jacks 180 Degree Toolless

5. Fit the wire retention cap to the rear of the jack (it will only fit one way round) and push it down to seat the wires in to the IDC slots.
6. Close the rear covers of the jack.



7. They should lock closed with an audible 'click'.
8. Secure the cable to the anchor point on the rear of the jack using the cable tie supplied taking care not to over tighten.



Recommended Tools

Part Number	Description	Purpose
786575	Side Cutters - 145mm	Cutting cable to length
993874	Cyclops Stripper	Cutting sheath
785404	Electronic Flush Cutters	Cutting cable central plastic separator, trimming wires and cable tie