


VPCA Installation Instructions

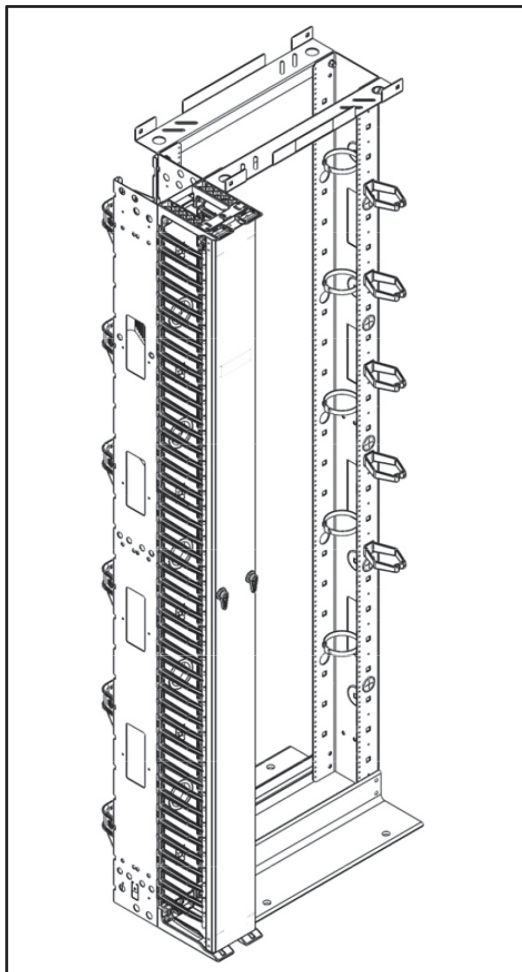


Parts:





- 1 – Vertical Manager
- 1 – Door Assembly
- 12 – 3/8-16x1 Bolts
- 12 – 3/8 16 Hex Nuts
- 12 – 3/8 Lock Washers

Tools Required:

9/16 in Socket Wrench




X12

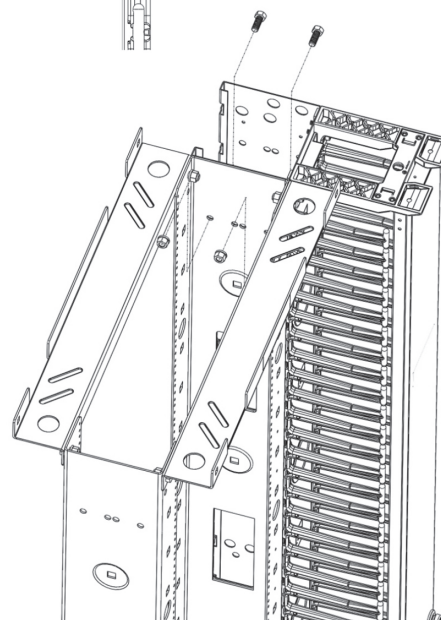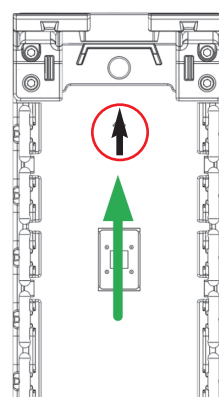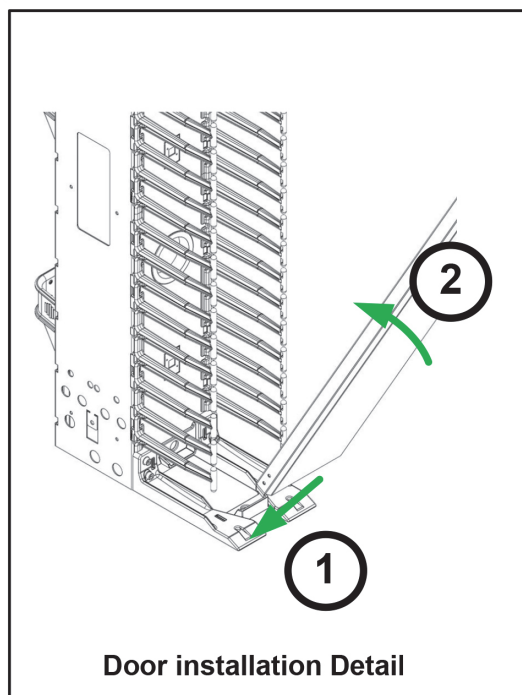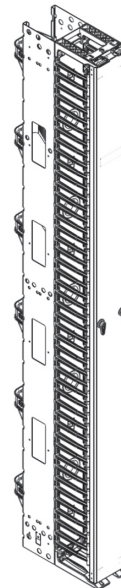

Mount cable manager to side of rack using hardware provided

VPCA Installation Instructions

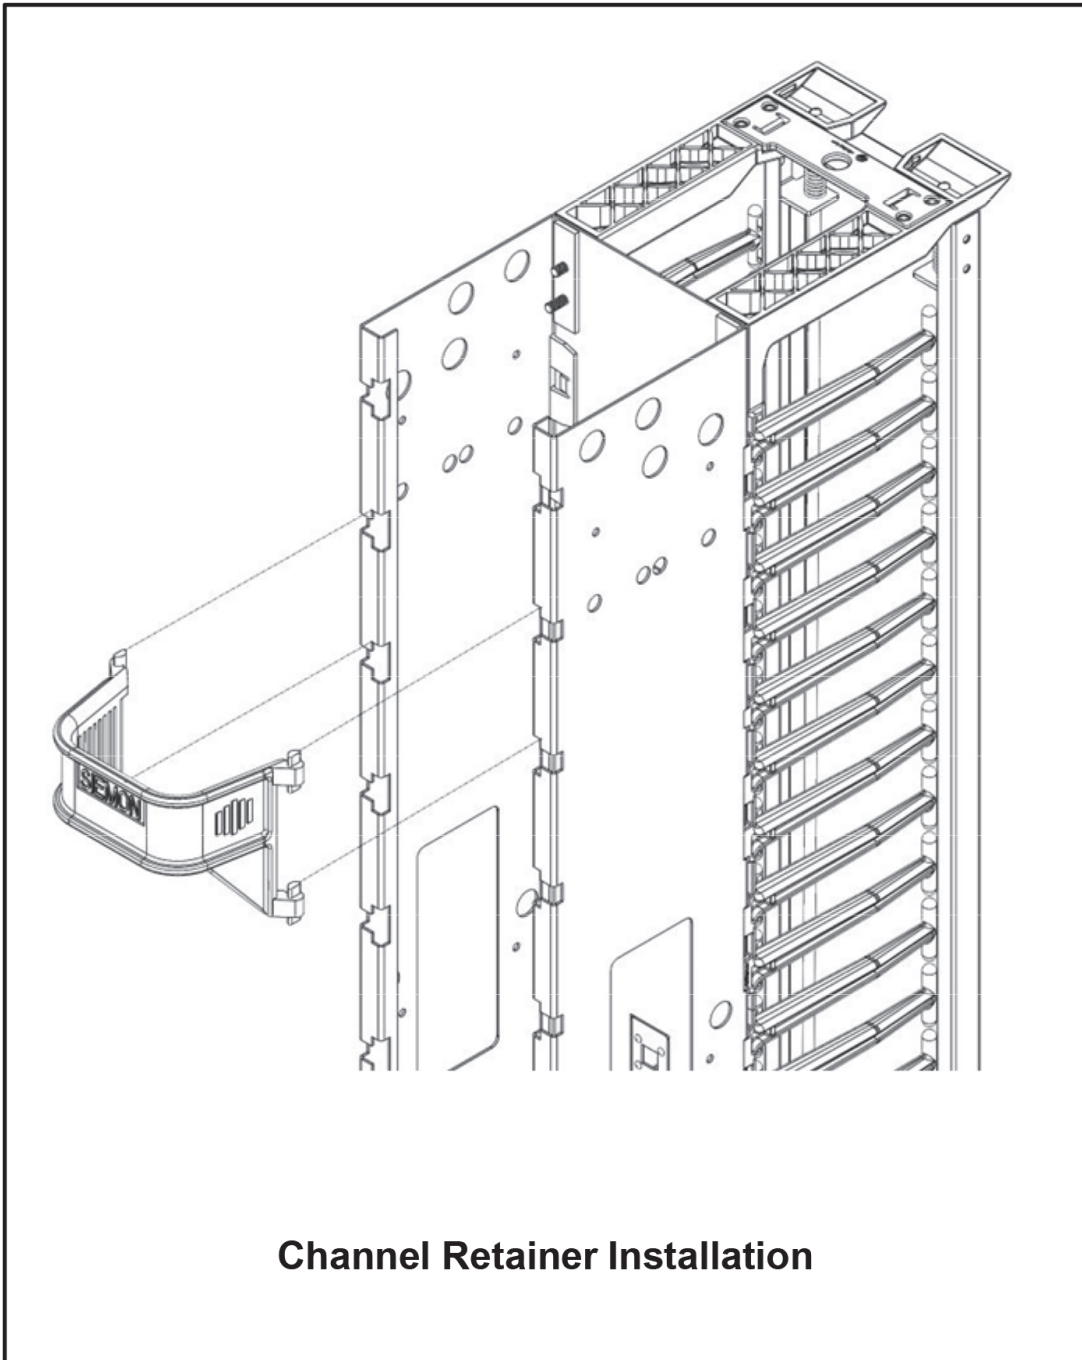

Channel Retainer Installation

Global Headquarters
Watertown, Connecticut USA
Tel: (1) 866-548-5814

For a complete listing of our global offices visit our web site