


## **Instructions for Wiring SAFEbox-B Fan Kit Option (827437 & 829880)**

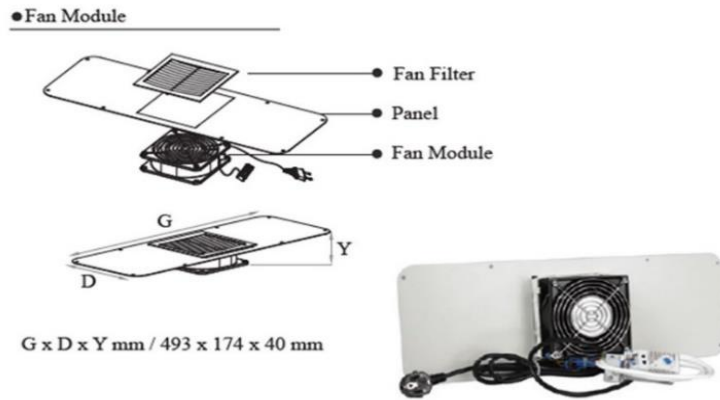

Wiring should be completed by a Professional Electrician or Qualified person

1. Power Cable should be unplugged before wiring is started
2. Power supply cable supplied 3 core, Brown (live) Blue (Neutral) Yellow / Green (Earth)
3. Thermostat cable supplied 2 core Brown / Blue
4. Power Lead - Brown (live) wire should be crimped / connected to Brown wire thermostat cable (see image)
5. Thermostat Cable 2 core – Blue wire to be crimped / connected to Fan power lead – see image below
6. Power Cable – Blue (Neutral) to be crimped / connected to Fan neutral lead – see image below
7. Once Fan Tray is installed on Metal mounting plate, earth lead to be connected to mounting plate



8. Set required temperature on thermostat using flat screwdriver – see image below



**It is recommended that wiring is checked and tested by a Professional Electrician or Qualified person.**